

Fairweather Roof Hydrant Maintenance Instructions

MAINTENANCE

1.) **Packing Nut Leak**

Hydrant is designed to use clean water at 20 psi to 100 psi. Should leakage occur at packing nut, simply tighten nut until leakage stops. If tightening nut does not stop leakage, remove nut and replace with packing. Figure 1

2.) **To Change Seal, Washer**

- Unscrew packing nut from under handle.
- Unscrew handle and operating rod from hose bib.
- Lift out operating rod and change washer.
- Replace operating rod and tighten packing nut.

3.) To prevent unauthorized use, the hydrant wheel handle can be removed.

